



Quick Installation Guide

Wireless USB Adapter

Images may differ from actual products.

© 2021 TP-Link 7106509432 REV2.1.0


English

1 Connect to a Computer

Option 1: Directly



Option 2: Via the USB Extension Cable



Note: In Windows XP or Vista, a Found New Hardware Wizard window will appear when the adapter is detected. Please click **Cancel**.

2 Install Driver

For Windows

A. Insert the CD and run the **Autorun.exe**.

Note: You can also download the driver from this product's Support page at www.tp-link.com.

B. Select **your adapter** and follow the instructions to complete the installation.

Note: If you can't install the driver successfully, disable the antivirus software and firewall, then try again.

For Mac OS X

A. Download the driver and utility from this product's Support page at www.tp-link.com.

B. Unzip the downloaded folder and run the **Install.pkg**.

C. Follow the instructions to complete the installation.




3 Join a Wireless Network

For Windows

Option 1: Via Windows Wireless Utility

A. Click the network icon (or) on the taskbar.

B. Select your Wi-Fi network, click **Connect** and enter the password when prompted.

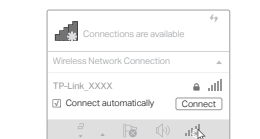


English

Option 2: Via WPS Tool

If your adapter does not have a WPS button, please ignore this option.

A. Press the WPS button on your router.

B. Within 2 minutes, press and hold the WPS button on the adapter until WPS Tool opens.

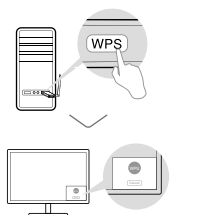

C. When the "Success!" message appears, your computer is connected to Wi-Fi.

For Mac OS X

Option 1: Via TP-Link Utility

A. Click (TP-Link Utility) on the menu bar or select **Site Survey** tab of the pop-up utility window.

B. Select your Wi-Fi network and enter the Wi-Fi password when prompted.




Option 2: Via Wi-Fi Protected Setup (WPS)

If your adapter does not have a WPS button, please ignore this option.

A. Press the WPS button on your router.

B. Within 2 minutes, press and hold the WPS button on the adapter until the following window appears.

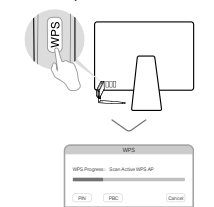


C. When you are prompted "WPS Protocol Finished" or "PBC - Get WPS profile successfully", it's complete.

For detailed instructions, please refer to the User Manual from this product's Support page at www.tp-link.com.


Português

1 Conectando ao Computador

Opção 1: Diretamente



Opção 2: Via Cabo de Extensão USB



Aviso: No Windows XP, uma janela de um **Novo Hardware** aparecerá quando o adaptador for detectado. Favor clicar em **Cancelar**.

2 Instalando o Driver

Para Windows

A. Insira o CD e inicie o **Autorun.exe**.

Aviso: Você também pode baixar o driver da nossa página de Suporte do produto em www.tp-link.com.

B. Selecione **seu adaptador** e siga as instruções para concluir a instalação.

Aviso: Caso não consiga instalar o driver com sucesso, desabilite o antivírus e o firewall, e tente novamente.

Para MAC OS X

A. Baixe o driver e o utilitário da página de Suporte do produto em: www.tp-link.com.

B. Descompacte a pasta baixada e inicie o arquivo Install.pkg.

C. Siga as instruções para completar a instalação.




3 Acessando uma Rede Wireless

Para Windows

Opção 1: Via Utilitário Wireless Windows

A. Clique no ícone de rede (or) na barra de tarefas.

B. Selecione sua rede Wi-Fi, clique em **Conectar** e digite a senha quando solicitado.

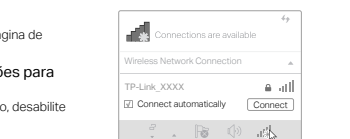


Português

Opção 2: Via Ferramenta WPS

Caso seu adaptador não possua botão WPS, favor ignorar esta opção.

A. Pressione o botão WPS no seu roteador.

B. Dentro de 2 minutos, pressione e segure o botão WPS no adaptador até que a Ferramenta WPS abra.

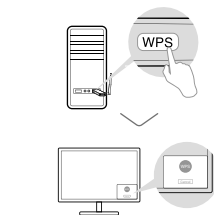

C. Quando a mensagem "Feito com sucesso!" aparecer, seu computador estará conectado ao Wi-Fi.

Para MAC OS X

Opção 1: Via Utilitário TP-Link

A. Clique em (Utilitário TP-Link) na barra de menu ou selecione a tabela Site Survey da janela pop-up do utilitário.

B. Selecione sua rede Wi-Fi e digite a senha quando solicitado.




Opção 2: Via WPS (Configuração Wi-Fi Protegida)

Caso seu adaptador não possua botão WPS, favor ignorar esta opção.

A. Pressione o botão WPS no seu roteador.

B. Dentro de 2 minutos, pressione e segure o botão WPS no adaptador até que a seguinte janela apareça.

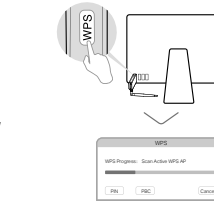

C. Quando você for notificado com "O Protocolo WPS finalizou" ou "PBC - Obter perfil WPS com sucesso", o processo está completo.

Para obter instruções detalhadas, consulte o Manual do Usuário na página de suporte deste produto em www.tp-link.com.

Para informações de aspectos de segurança e adequação do produto no território brasileiro consulte: www.gov.br/anatel/pt-br/

